


Figure 2: Portland Bangor Waste Oil Casco Site Layout and Sample Locations

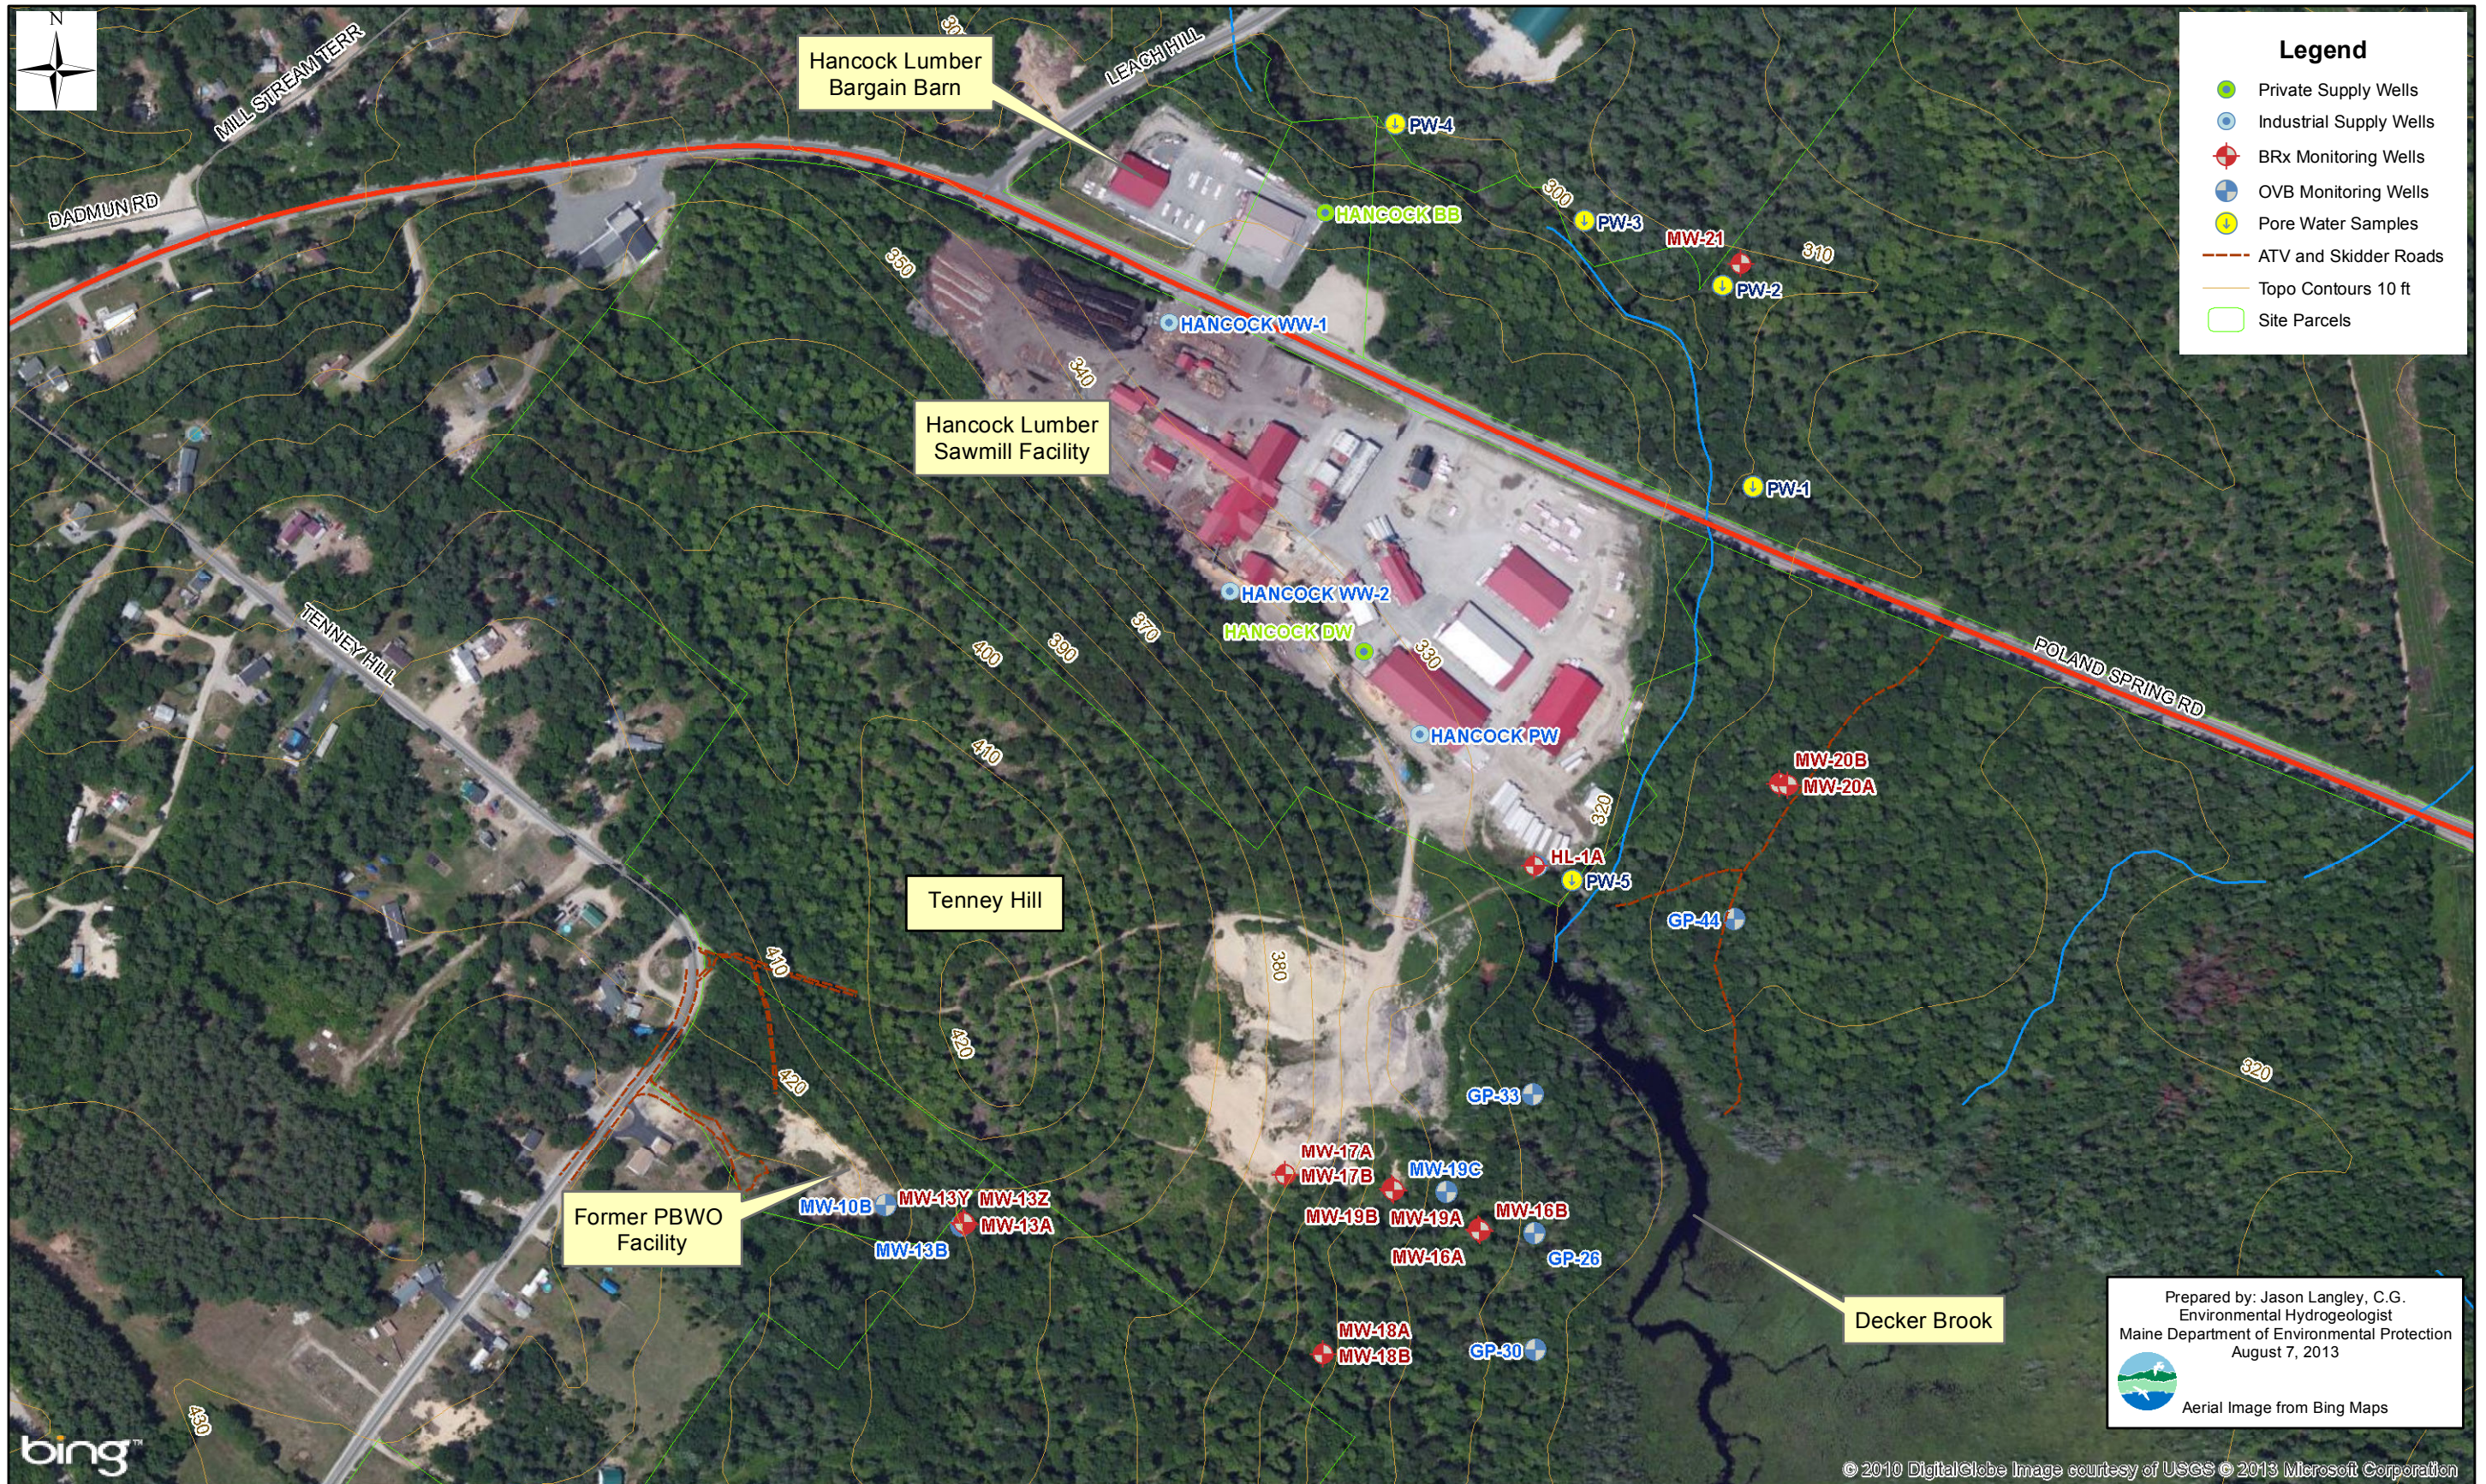

Legend

- Private Supply Wells
- Industrial Supply Wells
- + BRx Monitoring Wells
- + OVB Monitoring Wells
- Pore Water Samples
- ATV and Skidder Roads
- Topo Contours 10 ft
- Site Parcels

Prepared by: Jason Langley, C.G.
 Environmental Hydrogeologist
 Maine Department of Environmental Protection
 August 7, 2013

Aerial Image from Bing Maps



bing™